

## 2008 3.7 Dakota & 4.7 Durango liter Engines

### 3.7 Dakota

Mounting location: Brake master cylinder stud (using OEM factory nut/stud to attached Fitch mounting bracket & Fitch canister)


Brake master cylinder stud



5/16 OEM Quick Connect



**5/16 OEM Quick Connect** – remove OEM safety clip. Using white plastic disconnect tool, separate the OEM male & female quick connect fitting and connect the Fitch male fitting to the OEM female fitting and the Fitch female to the OEM male. Fitch female fittings have a built in safety clip so save your OEM safety clip in your glove box in case you need it in the future.

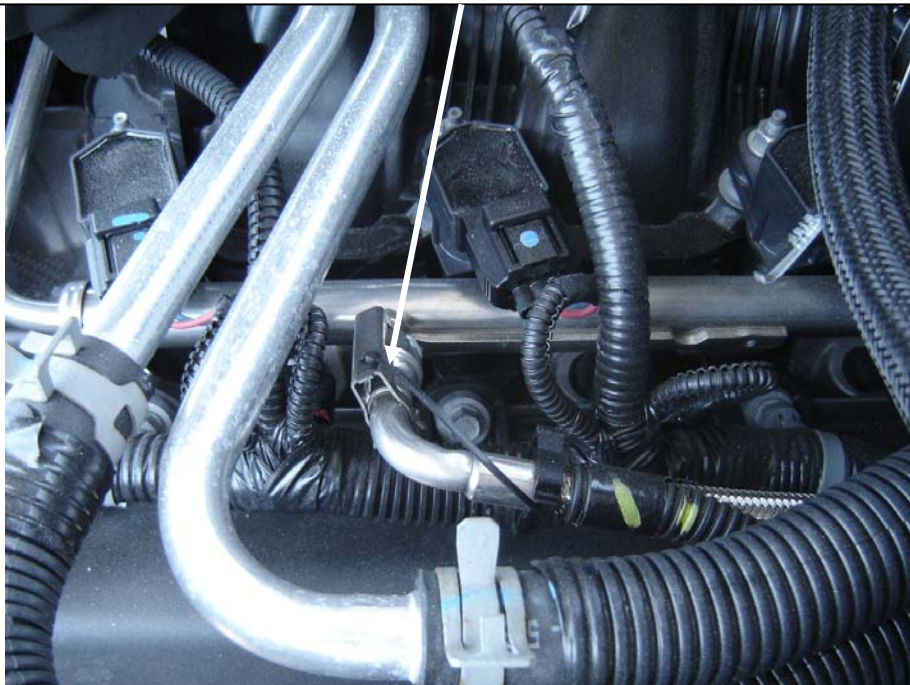

**Mounting Location for Fitch Unit –**  
Use the stud that already exist



**5/16 OEM Quick Connect –**  
underneath in this photo - remove  
OEM safety clip (black plastic  
w/metal)



Using white plastic disconnect tool, separate the OEM male & female quick connect fitting and connect the Fitch male fitting to the OEM female fitting and the Fitch female to the OEM male. Fitch female fittings have a built in safety clip so save your OEM safety clip in your glove box in case you need it in the future.

5/16 OEM Quick Connect fitting  
is attached right here at the fuel  
rail

